

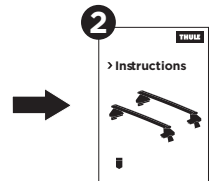


2

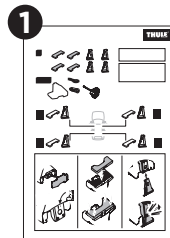

> Instructions

Thule Evo Clamp
710501

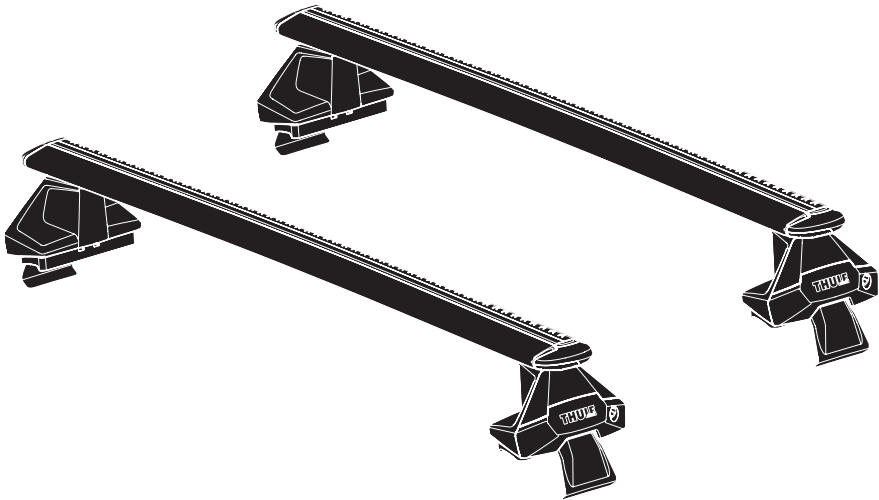

EN Roof mounted load carrier
DE Lastenträger zur Dachmontage
FR Barre de toit
NL Dakdrager
IT Barra portatutto da installare sul tetto
ES Portaequipajes de techo
PT Barra para montagem no tejadilho
SV Takmonterad lasthållare
DK Tagmonteret lastholder
NO Takmontert lasteholder
FI Katolle asennettava teline
ET Katusele paigaldatav katuseraam
LV Uz jumta uzstādāms kravas turētājs
LT Ant stogo tvirtinamas krovinų laikiklis
PL Uchwyt na bagażnik bazowy montowany na dachu
RU Багажник на крышу
UK Багажник для даху
BG Багажник, монтиран върху покрива
CS Nosič pro montáž na střechu
SK Strešný nosič
SL Nosilec za strešni prtljajnik
HR/BIH Krovni nosač tereta



RO Suport încărcătură montat pe acoperiș
HU Tetőre szerelhető csomagszállító
EL Σχάρα οροφής για μεταφορά φορτίου
TR Araç üstüne bağlanan yük taşıyıcı

HE מנשא מטען לגג הרכב
AR حامل نقل مثبت على السقف


ZH 顶置行李架
JA ルーフマウント型ロードキャリア
KO 루프 장착 화물 캐리어
TH โครงยึดของบรรทุกทุกแบบติดตั้งบนหลังคา

CITY CRASH
 Complies with ISO norm



ISO 11154-E

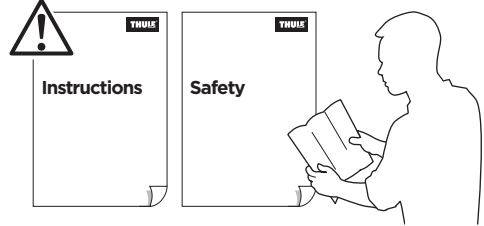

Max 130 km/h
80 Mph

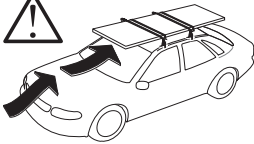


80 km/h
50 Mph

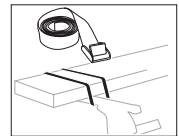


> Mounting Tutorial Thule Evo Clamp

THULE
 SWEDEN

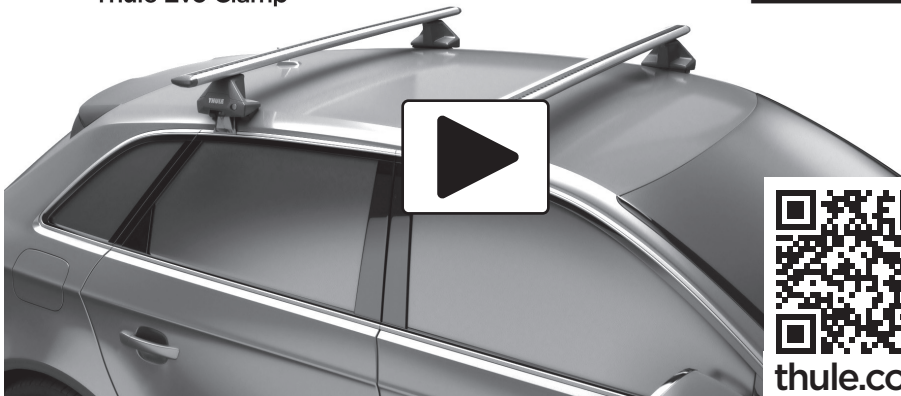



thule.com

1
KIT

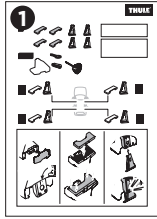


+

2
FOOT PACK







x1



x4




3 Nm

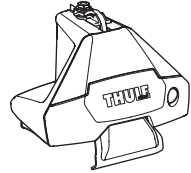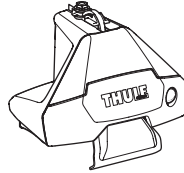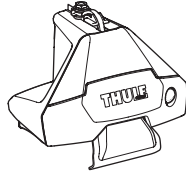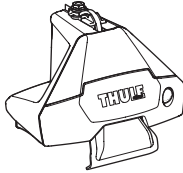


3
BAR




THULE
WingBar Evo

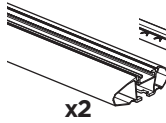

x2



x2



x2




x4




x2




THULE
AeroBlade



x2



x2



x2




x4




x2




THULE
ProBar

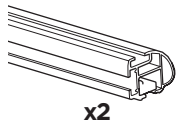

x2



x2



x2

x4

x4

x1




x2



x2



THULE
SquareBar



x2



x4

4


BAR

3




THULE
WingBar Evo



A

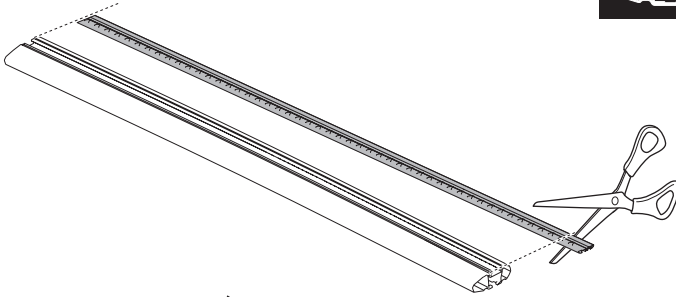



B

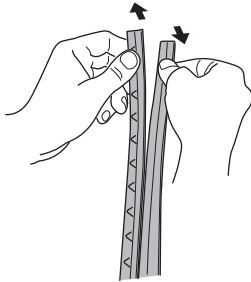


C

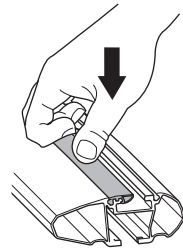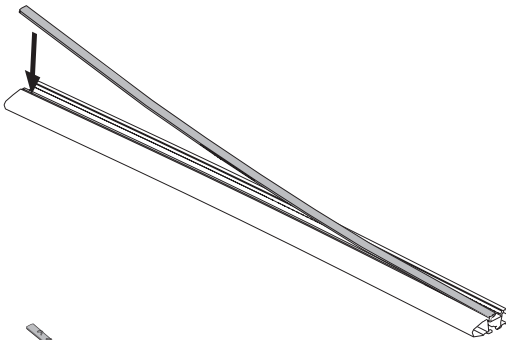

D

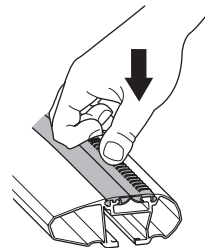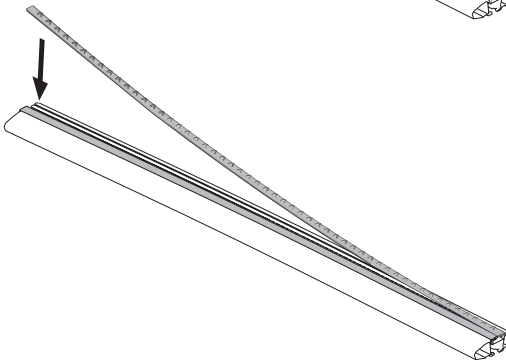

x2

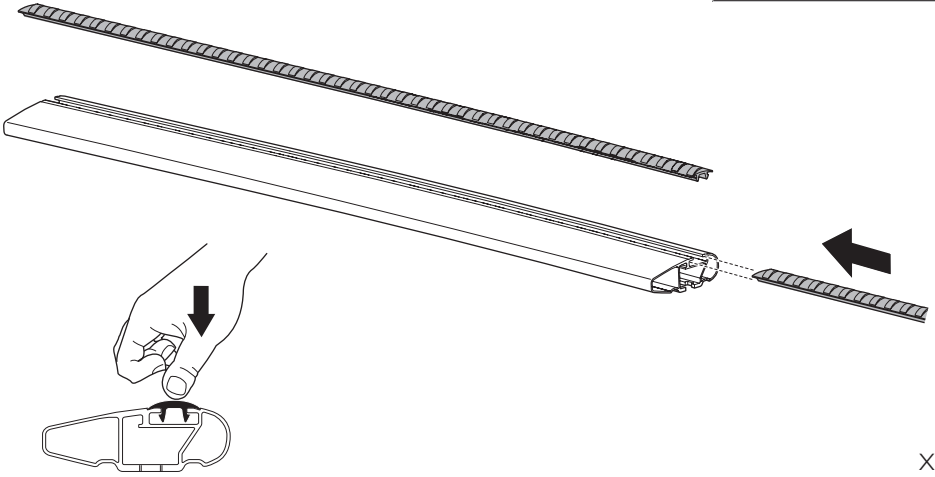

5

BAR 3


A



B





C

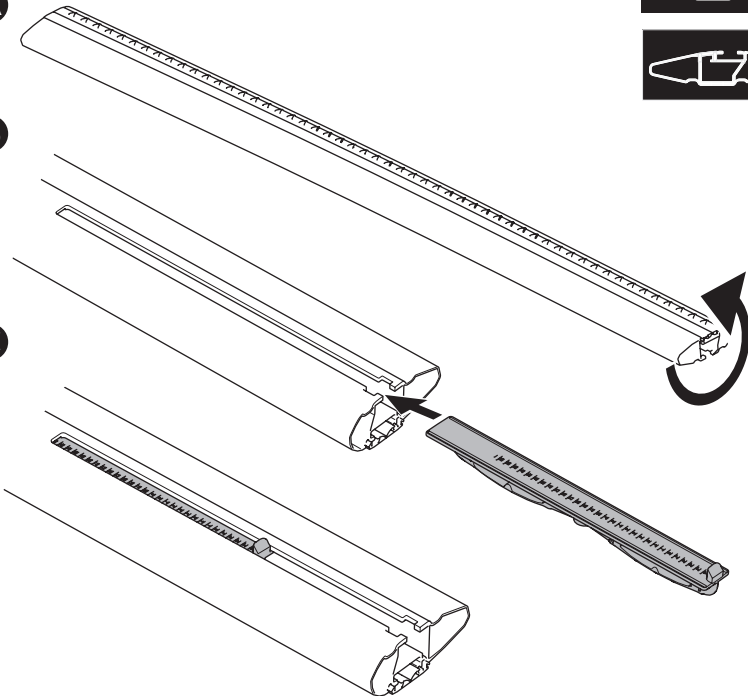


x4

6


1 KIT + **2** FOOT PACK + BAR **3**

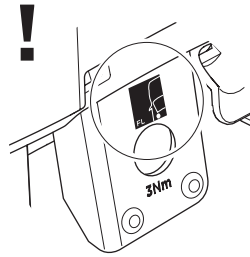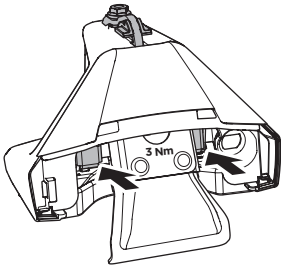

A

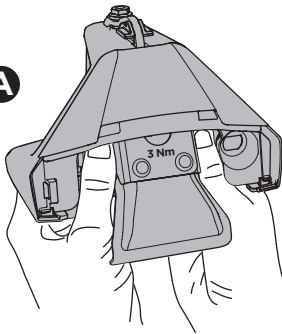


B

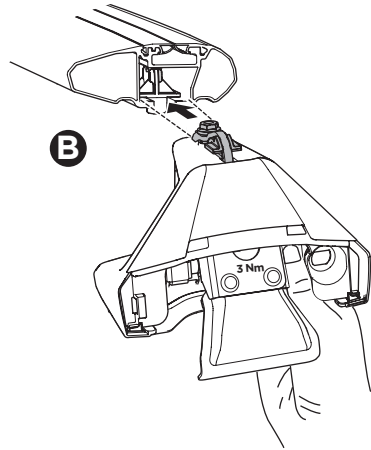


x4

7

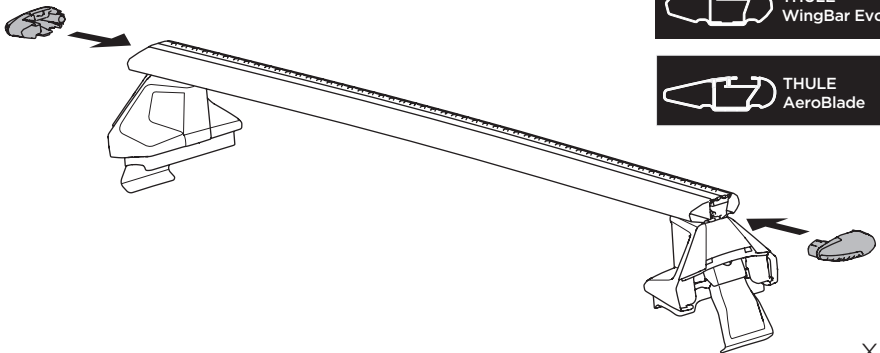


x2

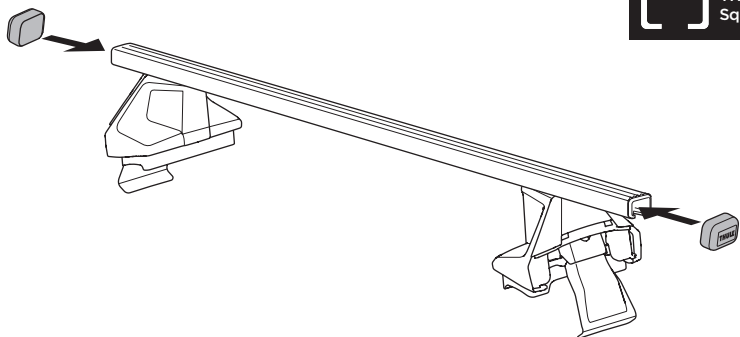

THULE
SquareBar







x2



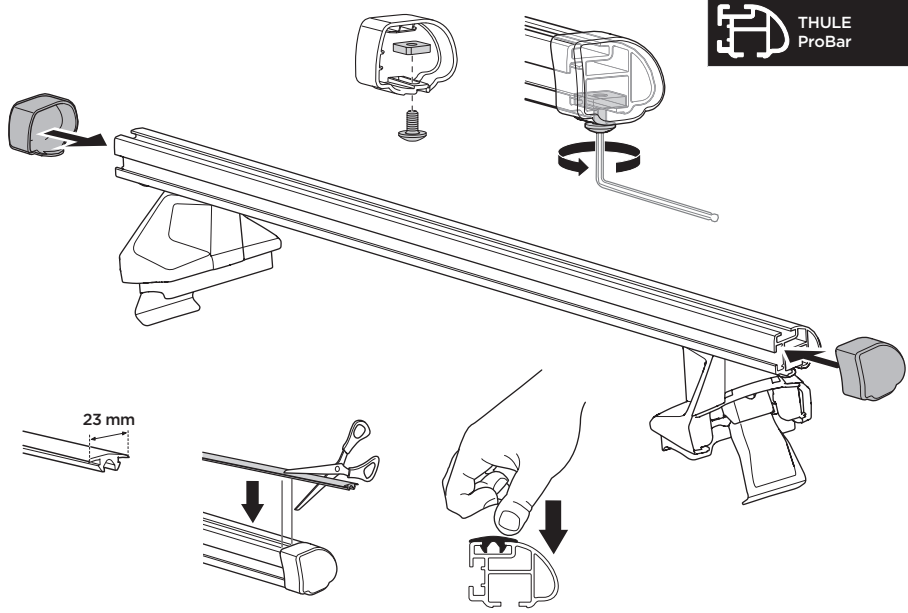


THULE
ProBar

x2




8

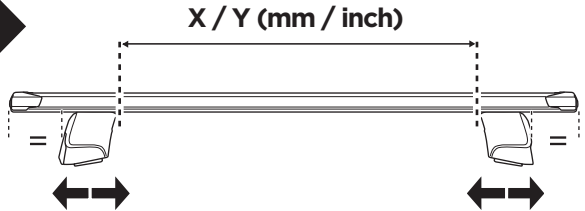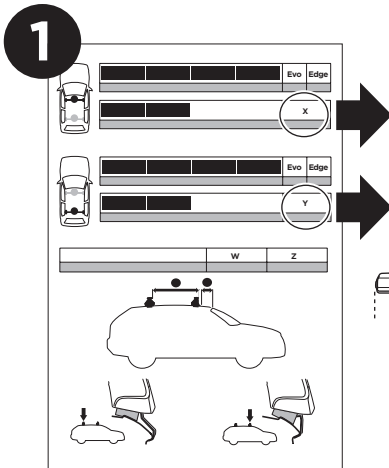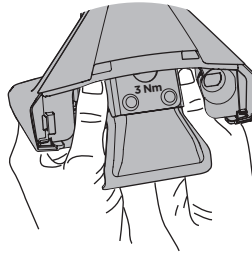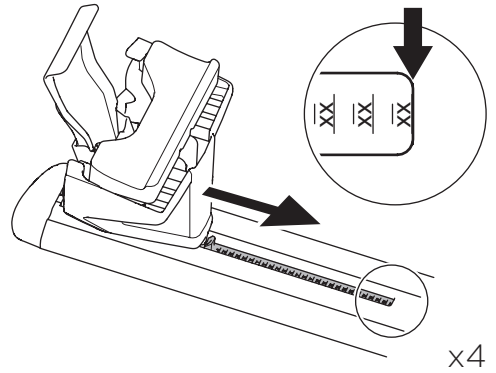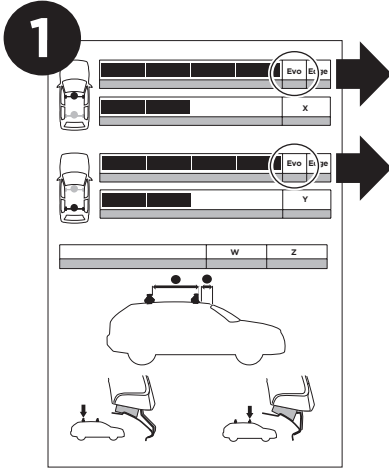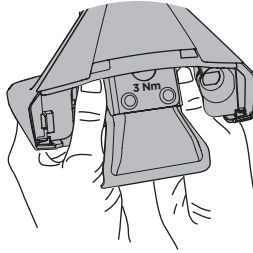




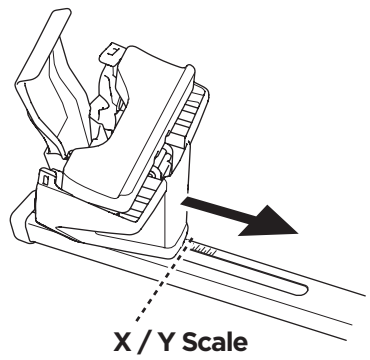
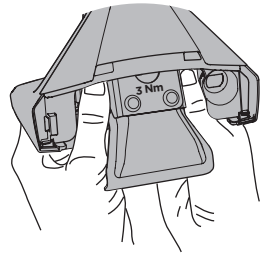
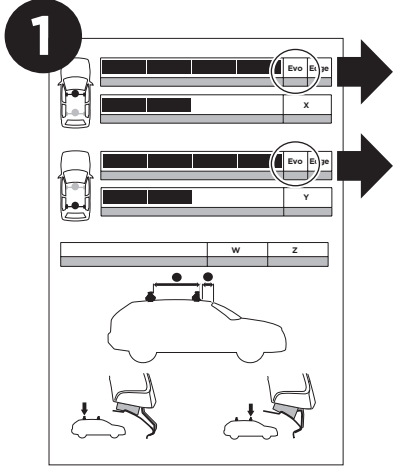


x4





9

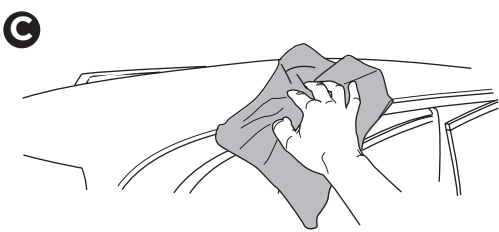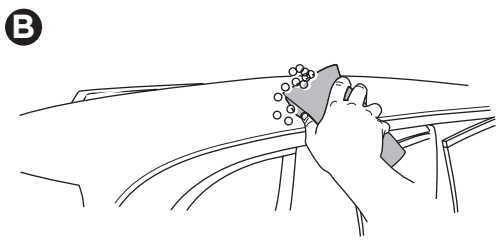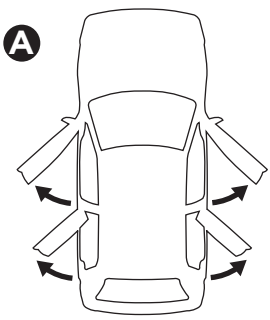

10

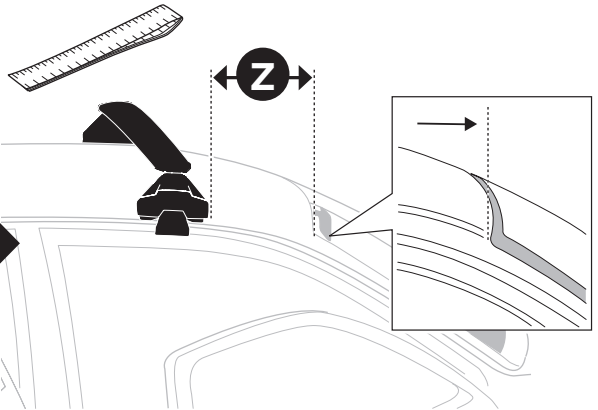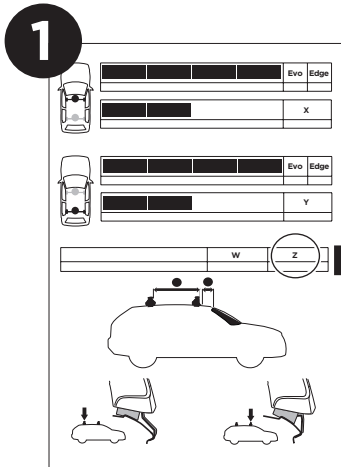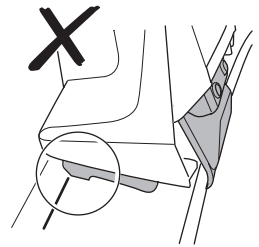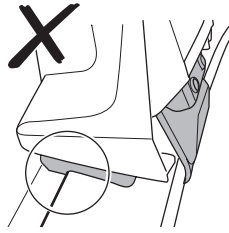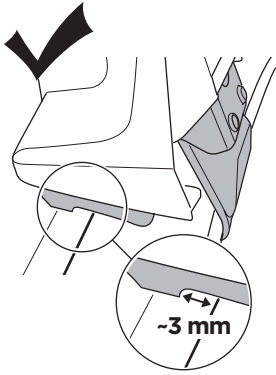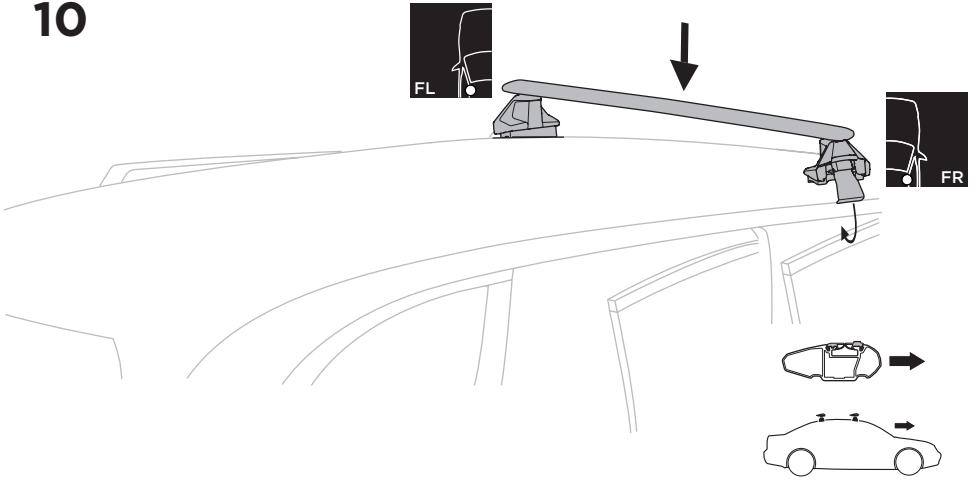


11

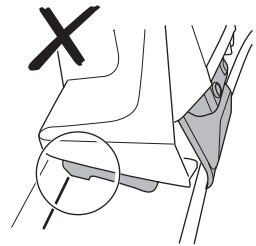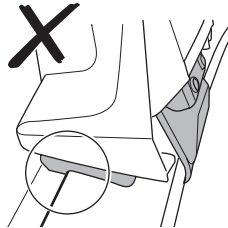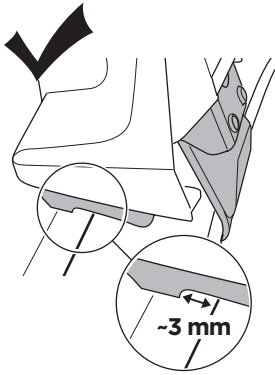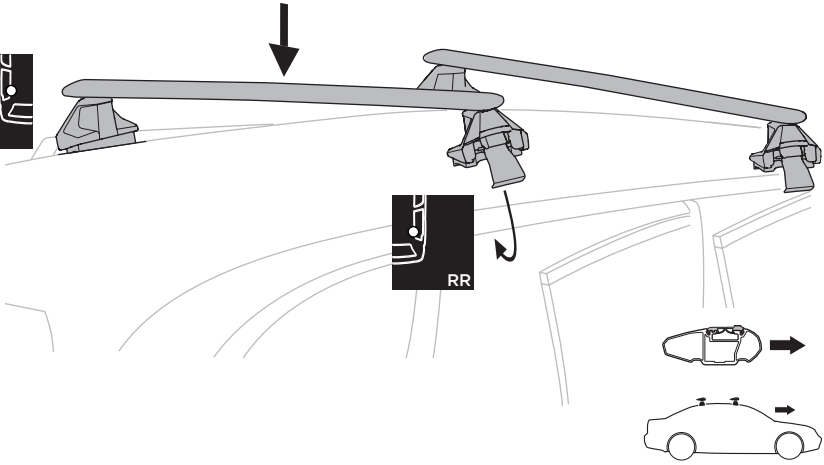

1




	Evo	Edge
	X	
	Evo	Edge
	Y	

W	Z
---	---

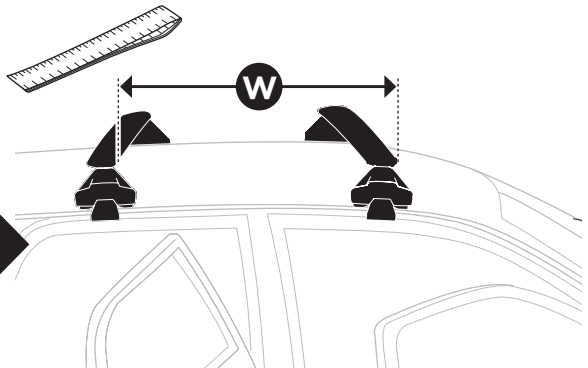

12



-50%

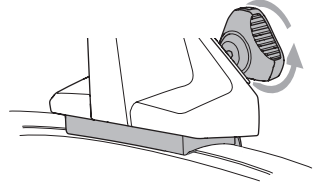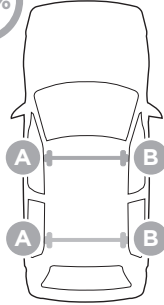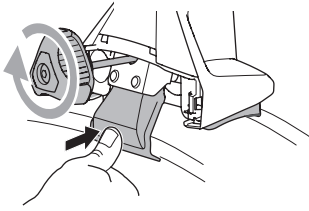

100%


Click
Click

3 Nm

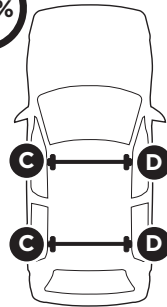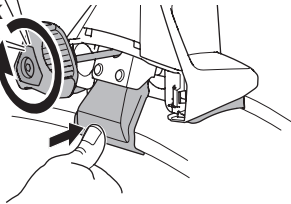


Click
Click


3 Nm

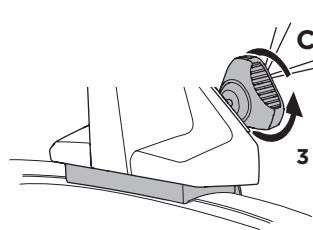



100%

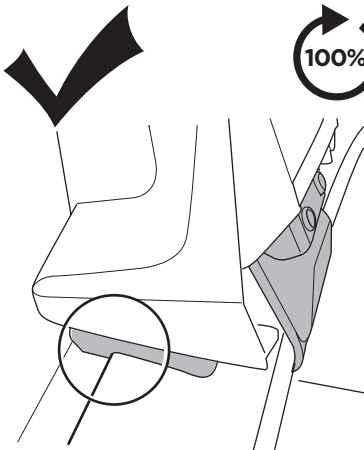




1

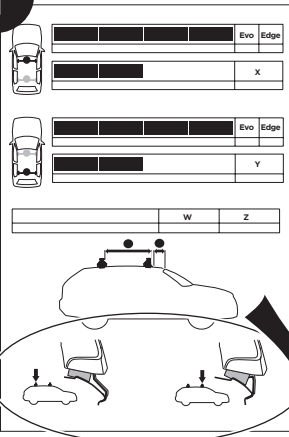

13

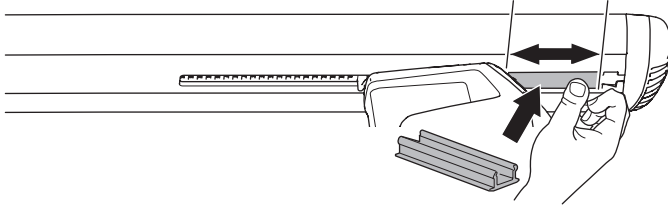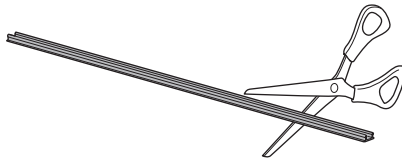


x4

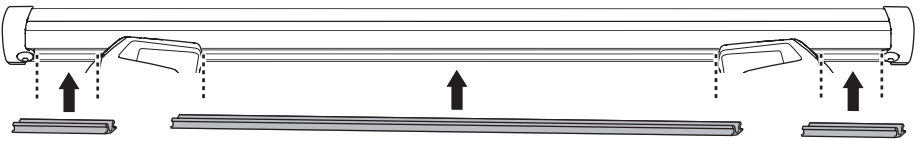


x2

14


A

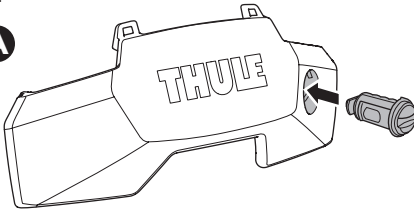

B

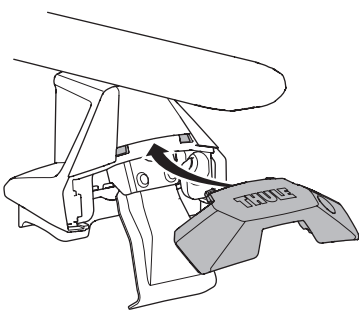

C

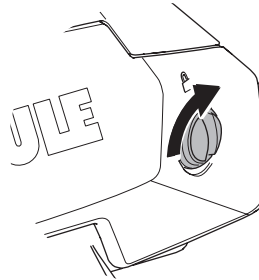


x4




Accessory




A

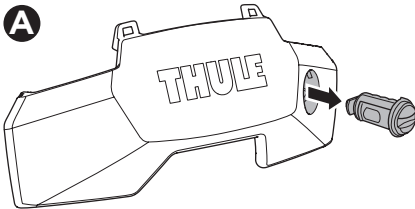


B

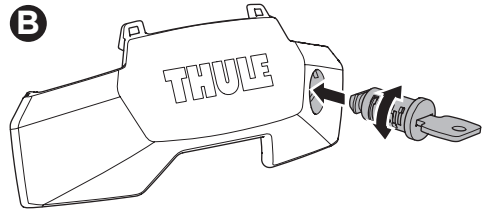

C

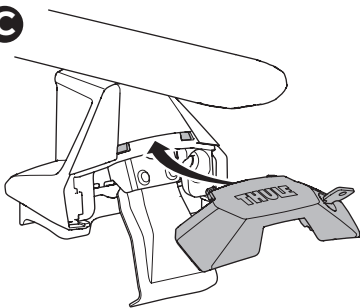


D

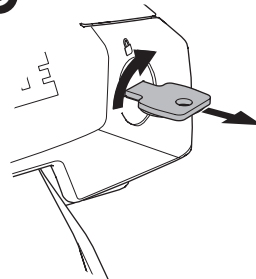





x4



Your Key-Number



15

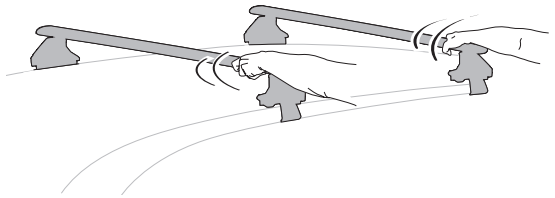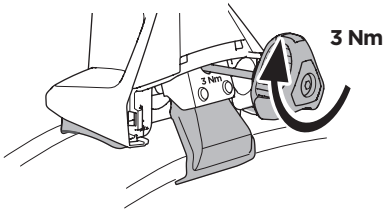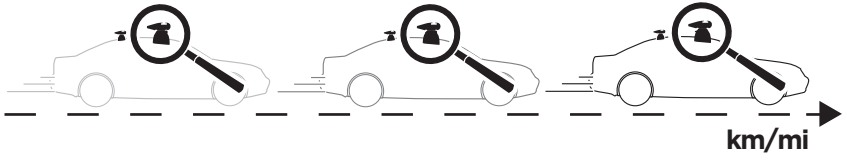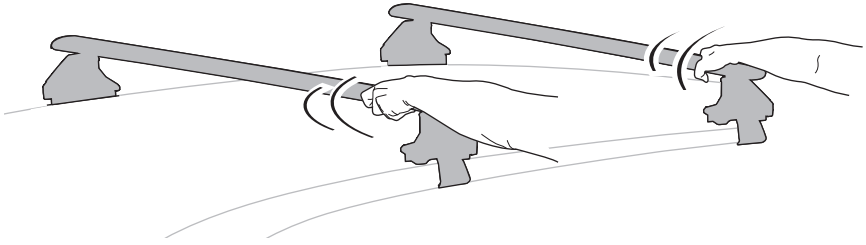

i

